

Remote Control Code List

English



HUMAX

Remote Control Code List

1. Using the Universal Remote Control

1. Select the mode(PVR, TV, DVD, AUDIO) you want to set by pressing the corresponding button on the remote control. The button will blink once.
2. Keep pressing the button for 3 seconds until the button lights on.
3. Enter the 3-digit code. Every time a number is entered, the button will blink. When the third digit is entered, the button will blink twice.
4. If a valid 3-digit code is entered, the product will power off.
5. Press the **OK** button and the mode button will blink three times. The setup is complete.
6. If the product does not power off, repeat the instruction from 3 to 5.


Note:

- When no code is entered for one minute the universal setting mode will switch to normal mode.
- Try several setting codes and select the code that has the most functions.





Remote Control Function List

The keys on the remote control function as in the list below.

Note: Some keys may not function depending on the product.

Button	TV	DVD	AUDIO
STANDBY	POWER	POWER	POWER
	MUTE	MUTE	MUTE
PVR			
TV			
DVD			
AUDIO			
1	DIGIT 1	1	INPUT 1
2	DIGIT 2	2	INPUT 2
3	DIGIT 3	3	INPUT 3
4	DIGIT 4	4	INPUT 4
5	DIGIT 5	5	INPUT 5
6	DIGIT 6	6	INPUT 6
7	DIGIT 7	7	INPUT 7
8	DIGIT 8	8	INPUT 8
9	DIGIT 9	9	INPUT 9
0	DIGIT 0, 11	0	INPUT 0
TV Portal			
MENU	MENU	MENU	MENU/MODE

Appendix

Button	TV	DVD	AUDIO
	TEXT EXPAND	PLAY	PLAY
	TEXT HOLD	PAUSE	PAUSE
	PIP INPUT	STOP	STOP
	PIP MOVE	RECORD, OPEN CLOSE	RECORD
	PIP OFF	REWIND, SEARCH REVERSE; SCAN	DVD SEARCH REW, CD SEARCH REW, REW
	PIP	FAST FORWARD, SEARCH FORWARD; SCAN	FAST FORWARD, DVD SEARCH REW, CD SEARCH REW, REW
	TEXT MIX	SKIP -, TRACK -, CHAPTER -	DVD SKIP -, CD SKIP -, SKIP -
	TEXT OFF, TV	SKIP, TRACK +, CHAPTER +	DVD SKIP+, CD SKIP +, SKIP +
RED	RED	RED	RED
GREEN	GREEN	GREEN	GREEN
YELLOW	YELLOW	YELLOW	YELLOW
BLUE	BLUE	PROGRAMME	BLUE
MEDIA			
GUIDE	GUIDE	GUIDE	DSP MODE
OK	OK	OK	OK
UP	UP	UP	UP
LEFT	LEFT	LEFT	LEFT
RIGHT	RIGHT	RIGHT	RIGHT
DOWN	DOWN	DOWN	DOWN
EXIT	EXIT	EXIT, RETURN	EXIT
BACK	LAST, RECALL; PP; LAST CHANNEL	CLEAR	REPEAT
VOL+	VOL+	VOL+	VOL+
VOL-	VOL-	VOL-	VOL-
	INFO, OSD; DISPLAY	INFO, OSD; DISPLAY	INFO
LIST		LIST	
CH+	CH+	CH+	CH+
CH-	CH-	CH-	CH-
TEXT	TEXT	PVR MENU	
		AUDIO, LANGUAGE	SURROUND
	SUBTITLE, LANGUAGE; CC	SUBTITLE	

Button	TV	DVD	AUDIO
TV/RADIO	TV/DTV ATV/DTV; D/A; DTV/TV; DTV; DIGITAL	HDD, DVD/HDD	BAND
OPT+			RANDOM
SOURCE	SOURCE, AV, 55INPUT; TV/AV	SOURCE, TV/DVD, TV/DISK	SOURCE, FUNCTION
V-FORMAT	TEXT SIZE; TEXT EXPAND; FTB		
WIDE	WIDE, FORMAT, 16:9, ASPECT; ZOOM	ZOOM	

2. TV Code List

Brand	Code
A MARK	002
ABEX	016
ACCENT	004
ACTION	110, 124
ACURA	004
ADMIRAL	030, 042, 076, 099, 123, 159, 160
ADVENTURA	177
ADYSON	016, 063
AIKO	029
AKAI	015, 099, 109, 124, 161, 172, 177
AKURA	064, 071, 161
ALARON	051, 062
ALBA	004, 017, 018, 064, 123, 117
ALBIRAL	157, 158
ALLORGAN	118
ALLSTAR	161
AMBASSADOR	049
AMPLIVISION	063
AMSTRAD	004, 018, 047, 049, 145
AMWAY	161
ANAM	003, 004, 052
ANAM NATIONAL	024
ANITECH	004, 071, 161
ANSONIC	127
AOC	002, 009, 015, 056
ARC EN CIEL	171
ARCAM	062, 063
ARCHER	002
ASA	159, 160, 161
ASBERG	158
ASUKA	064, 071
ATLANTIC	098
AUDINAC	081
AUDIOSONIC	018, 071
AUDIOVOX	002, 029, 052, 084
BANG & OLUFSEN	160
AUMARK	026
AUTOVOX	068, 076, 097, 160
BARCO	086
BASIC LINE	004, 064
BAUR	018, 087, 097, 099, 102, 108, 175, 176, 177, 178, 181, 185
BAYSONIC	052
BEAUMARK	050
BEC	099, 110, 124
BECRESE	040, 099, 108, 109, 110, 172, 177
BEKO	161, 162, 163, 164, 165
BELCOR	009
BELL & HOWELL	006, 038, 106
BEON	018
BINATONE	063

Appendix

BLACK PANTHER	158
BLACKSTRIPE	040, 106, 108, 172
BLAUPUNKT	059, 060, 061
BLUE SKY	064
BLUE STAR	075
BOOTS	063
BOSCH-BAUER	098
BPL	075
BRANDT ELECTRONIQUE	171
BRADFORD	052
BRINKMANN	123
BRITANNIA	062
BRIONVEGA	159
BRIORRYEGA	160
BROCKWOOD	009, 172, 177
BROKSONIC	002, 067, 085, 172, 177
BROTHER	071
BRUNS	126, 158, 159, 160
BSR	093, 118
BTC	064
BUSH	004, 017, 018, 064, 075, 093, 099, 117, 172
CAMPLE	172, 177
CANDLE	015, 025, 057
CAPEHART	124, 172
CAPSONIC	071
CARNIVALE	015
CARREFOUR	017
CARVER	023, 046
CASCADE	004
CATHAY	018
CCE	063, 018, 078
CCI	115
CENTURION	018
CENTURY	159, 160
CGE	101, 123
CIE	133, 161
CIMLINE	004, 117
CINERAL	029, 084, 172
CIRCUIT CITY	177

CITIZEN	015, 019, 025, 026, 029, 040, 057, 074
CLAIRTONE	056
CLARIVOX	018, 125, 168
CLATRONIC	098, 127, 158, 161
CME	004, 005, 017, 018, 028, 042, 049, 063, 065, 066, 068, 076, 079, 087
CONCERTO	025
CONDOR	098, 158, 161
CONIC	110, 172
CONTEC	004, 017, 052, 056, 062, 172
CONTINETAL EDISON	141, 171
COSMOS	161
CRAIG	052
CRIPTOVISION	105
CROSLEY	023, 110, 159, 160, 172, 177
CROWN	004, 018, 019, 052, 127, 158, 161
CS ELECTRONICS	062
CTC	098, 158
CURTIS MATHES	006, 015, 019, 020, 021, 023, 026, 030, 035, 038, 025, 040, 044, 084, 106, 172
CXC	052
CYBERTRON	064
DAEWOO	004, 009, 018, 019, 029, 084, 133, 161
DAINICHI	064
DANSAI	018
DAYTON	004, 009, 019, 108
DE GRAAF	066, 097, 161
DECCA	018, 028, 129, 161
DECCAVIDEO	161
DENON	035
DESMET	098
DIXI	003, 004, 018, 126
DUAL	097
DUAL TEC	063
DUMINT	127
DUMONT	007, 009, 158, 159, 160, 172, 177
DYNATECH	063, 172, 177
EB TELECOM	105

ECR	172
ECTEC	081
ELBE	116, 168
ELBIT	160, 161
ELECTROBAND	056, 177
ELECTROHOME	080, 106, 110, 172, 177
ELECTROVENDA	161
ELEKTA	071
ELEKTRONIKA	161
ELIN	018, 161
ELITE	040, 064, 098, 106, 172
ELMAN	127, 158, 163
ELTA	004
EMERSON	009, 019, 038, 049, 050, 051, 053, 054, 056, 067, 072, 074, 075, 085, 158, 159, 161, 172, 177
EON	172
ENVISION	015
ERRES	018
ESC	161
EURO-FEEL	071
EUROMANN	071
EUROPHON	127, 158
FERGUSON	018, 163, 166, 167, 168, 169
FIDELITY	062, 097, 104
FINLADIA	106
FINLUX	018, 028, 051, 093, 129, 158, 160, 161
FIRST LINE	118, 004, 062, 063
FISHER	038, 041, 063, 097, 106, 108, 126, 160, 172
FORMENTI	018, 098, 103, 160, 161
FORTRESS	160, 172
FRABA	161
FRONTECH	042, 071, 099
FUJITSU	028, 051, 124, 172, 177
FUNAI	047, 051, 052, 071, 118, 172, 177
FUTURETECH	052
GALAXIS	123, 142, 158, 161
GALAXY	158
GBC	099

GE	011, 013, 020, 021, 024, 030, 034, 050, 075, 084
GEC	018, 028, 063, 095, 110, 129, 161
GELOSO	004, 099
GENEXXA	042, 064
GIBRALTER	007, 009, 015
GO VIDEO	026
GOLDSTAR	156, 001, 009, 015, 016, 018, 019, 025, 033, 050, 063, 071, 093, 110, 124, 140, 161
GOODMANS	017, 018, 028, 051, 063, 133, 161
GPM	064
GRADIENTE	022, 025, 046, 082
GRADIN	098
GRAETZ	042, 099
GRANADA	018, 028, 063, 097, 109, 124, 161
GRANDIN	075
GRUNDIG	018, 059, 060, 068, 137
GRUNPY	051, 052
HALIEAX	071
HALLMARK	050, 172, 177
HANSEATIC	018, 089, 097, 098, 099, 118, 119
HARLEY DAVIDSON	051, 172, 177
HARMAN KARDON	023
HARRAD	172, 177
HARVARD	052, 172, 177
HCM	004, 071, 075, 161
HEATHKIT	177
HEMMERMANN	097
HIFIVOX	171
HINARI	004, 017, 018, 051, 064, 161, 172
HISAWA	075, 159
HITACHI	016, 017, 025, 031, 032, 035, 037, 042, 048, 063, 094, 095, 096, 097, 099, 102, 108, 109, 110, 111, 112, 113, 114, 124, 148, 172, 177
HUANYU	062
HUMAX	151, 152, 153, 154
HUSPI ELEKTRONIK	123
HYPERSION	134
HYPSON	018, 071, 075

Appendix

ICE	063, 071, 161
ICES	064
IMA	172, 177
IMPERIAL	092, 099, 101, 123, 161
INDESIT	068
INDIANA	018
INFINITY	023
INGEKEN	139
INGELEN	042, 164
INNOHIT	028, 124
INNOVA	018
INTEQ	007
ISKRA	158
INTERBUY	071
INTERFUNK	018, 042, 095, 097, 099, 159, 160, 161
INTERVISION	018, 063, 071, 127, 144, 158, 161
ISUKAI	064
ITT	042, 099, 108
JACSON	129
JBL	023
JCB	137, 177
JVC	017, 022, 045, 054, 172
JEC	040
KAISUI	004, 062, 063, 064, 075
KAMP	062
KAPSCH	042, 095, 099
KARCHER	161
KATHREIN	089
KAWASHO	062, 077
KEC	052
KENDO	018, 099, 117, 119, 127, 158, 161
KENWOOD	009, 015
KINGSLEY	062
KLH	124, 172, 177
KLOSS	012
KNEISSEL	161
KMC	033
KOLSTER	158

KONIG	004, 005, 017, 018, 042, 061, 068
KORPEL	018
KORTING	098, 160
KOYODA	004
KTV	015, 019, 052, 056, 063, 074, 172, 177
KUBA ELECTRONIC	097
KURA	097
LENCO	071, 133, 146, 018, 028, 071, 118, 124, 158, 161
LG	025, 154, 161
LIESENK & TTER	018, 161
LIFETEC	071, 161
LINITRON	172
LLOYD	177
LLOYTRON	016, 172
LOEWE	159, 160
LOGIK	156, 006
LUMA	099
LUXMAN	025
LUXOR	068, 094, 097, 099, 102, 124
LXI	007, 020, 023, 038, 040, 050, 106
M ELECTRONIC	004, 018, 042, 063, 097, 127, 163, 172
MAGNADYNE	158, 159, 160
MACYS	172
MAGNAFON	127, 158, 167
MAGNASONIC	106, 161
MAGNAVOX	010, 012, 014, 015, 017, 023, 051, 057, 058, 110, 172
MAJESTIC	006
MANDOR	071
MANESTH	063, 071, 098, 117
MARANTZ	015, 018, 023, 089, 161
MARCY'S	172
MARELLI	160
MARK	018
MATSUI	004, 005, 018, 049, 063, 092, 097, 117, 161
MATSUSHITA	021, 070
MC MICHAEL	110

MEDIATOR	018
MEGATRON	002, 035, 050, 109
MEI	056
MEMOREX	004, 006, 025, 026, 033, 036, 038, 050, 070, 071, 106
MEMPHIS	124
METZ	159, 160, 161
MGA	009, 015, 036, 039, 050
MIDLAND	007, 016, 019, 020, 021, 034
MINERVA	068
MINUTZ	011
mitsubishi	009, 017, 030, 036, 039, 050, 068, 159, 160, 172
MIVAR	062
MOTOROLA	024, 030
MTC	009, 015, 025, 026, 056, 062, 097
MULTISTANDARD	127
MULTITECH	004, 052, 062, 063, 099, 127, 158, 172, 177
MUTIMEDIA	132
NAD	040, 044, 050, 172
NAONIS	099
NATIONAL	068
NEC	009, 015, 017, 025, 046, 172
NECKERMANN	018, 059, 087, 089, 097, 099, 102, 159, 160, 161, 177, 185, 189
NEI	018, 161
NESCO	051
NETSAT	018
NIKKAI	016, 018, 028, 040, 062, 064, 071, 124
NIKKO	007, 015, 020, 029, 038, 040, 050, 161
NISATO	081
NOBLEX	083
NOBLIKO	158
NOGAMATIC	171
NOKIA	071, 094, 095, 096, 097, 099, 106, 108, 143, 161
NORDMENDE	160, 163, 171
NORMN	161
NOSHI	008

NTC	029
OCEANIC	042, 099, 106, 118
OKANO	161
ONWA	052
OPTIMUS	038, 044, 070
OPTONICA	030, 043
ORAVA	161
ORION	018, 049, 051, 067, 085, 097, 098, 118, 117, 161, 172, 177
OSAKI	016, 028, 063, 064, 071, 124,
OSO	064
OSUME	016, 028, 124
OTTO VERSAND	017, 018, 059, 063, 087, 089, 093, 097, 098, 099, 102, 108, 117, 118, 161, 163, 172, 175, 176, 177, 178, 181, 182, 185, 186, 189
PALLADIUM	099, 160
PANAMA	063, 071
PANASONIC	156, 020, 021, 022, 023, 024, 026, 030, 035, 036, 038, 040, 042, 043, 050, 065, 068, 070, 079, 099
PATHE CINEMA	062, 098
PATHE MARCONI	171
PAUSA	004
PCE/PEC	040, 106, 108, 172
PENNEY	001, 102, 008, 009, 011, 013, 015, 016, 019, 020, 021, 025, 026, 034, 040, 050
PERFORMANCE	172, 177
PHASE	016
PHILCO	009, 010, 012, 014, 015, 023, 035, 057, 058, 085, 123, 159, 160, 161, 172
PHILIPS	007, 008, 009, 010, 011, 012, 013, 014, 018, 019, 023, 089, 110, 124, 138, 160, 161, 172, 177
PHOENIX	160
PHONOLA	018, 098, 160
PILOT	009, 015, 019
PIONEER	042, 044
POLICOM	068, 158
POLYRON	071
PORTLAND	009, 019, 029, 177
PRANONI PRINCE	099, 158

Appendix

PRIMA	040, 106, 172
PRINZ	124
PRISM	021
PRO VISION	161
PROFEX	004, 161
PROFITRONIC	158, 161
PROLINE	119
PROSCAN	015, 020
PROTEC	099, 127
PROTECH	004, 018, 063, 071
PROTON	002, 050
PULSAR	007, 009, 110, 124
QUASAR	021, 024, 043, 070, 158
QUELLE	005, 018, 087, 093, 097, 099, 108, 117, 118, 172, 175, 176, 177, 178, 181, 185, 186, 189, 192, 193
QUESTA	017, 172
RADIO SHACK	009, 015, 016, 019, 020, 025, 038, 043, 050, 052, 106
RADIOLA	018, 161
RADIOMARELLI	160
RADIOTONE	071, 161
RADIX	108
RANK ARENA	017
RCA	008, 009, 020, 021, 030, 034
REALISTIC	009, 015, 016, 019, 025, 038, 043, 050, 052, 106
REKORD	149
REVOX	018
REX	042, 071, 076, 099
RFT	088, 126, 160
RHAPSODY	056, 062
R-LINE	018
RM-U301	174
ROADSTAR	004, 064, 071, 161
ROYAL LUX	131
RTF	018
RUNCO	007, 015
SABA	042, 095, 099, 163, 170, 171
SAGEM	139
SAISHO	004, 005, 049, 071, 117

SAKIO	071
SALORA	042, 094, 097, 099, 102, 106, 124
SAMBERS	127, 158
SAMPO	015, 016, 019
SAMSUNG	004, 009, 015, 016, 018, 019, 025, 026, 050, 063, 071, 078, 089, 124, 137, 161
SAMSUX	019
SANDRA	062
SANSEI	084
SANSUI	085
SANYO	005, 017, 028, 038, 041, 106, 107, 108, 124, 129, 172
SBR	018
SCHAUB LORENZ	099
SCHNEIDER	018, 064, 071, 097, 136, 143, 147, 161
SCIMITSU	009
SCOTCH	050
SCOTT	009, 050, 051, 052, 067, 172, 177
SEARS	020, 023, 025, 038, 040, 041, 047, 050, 051, 106
SEG	017, 063, 071, 126, 127, 158, 161, 172, 193
SEI	049
SEI-SINUDYNE	097, 099, 117, 118, 127, 158, 159, 160, 161, 177, 181
SELECO	042, 076, 099, 100, 119, 120, 122
SEMIVOX	052
SEMP	040
SENTRA	040
SHARP	017, 019, 030, 043, 172
SHINTOM	161, 177
SHINTOSHI	161
SHIVAKI	161
SHOGUN	009
SHORAI	118
SIAREM	127, 158, 159, 160
SICATEL	121
SIEMENS	018, 059, 060, 061, 161
SIGNATURE	006, 040, 177
SILVER	017, 172

Appendix

English

SIMPSON	057, 058	TASHKO	017, 063
SINGER	127, 159, 160, 161	TATUNG	002, 018, 024, 028, 063, 124
SINUDYNE	049	TEC	063, 133, 161
SKANTIC	099	TECHLINE	127, 158
SKY	018	TECHNEMA	098
SOGERA	098	TECHNICS	007, 020, 021, 070
SOLAVOX	016, 042	TECHNISAT	130, 161
SONITRON	108	TECHNOL ACE	051
SONOKO	004, 018, 071	TECHWOOD	002, 021, 025, 177
SONOLOR	042	TECNISON	161
SONTEC	018, 161	TEKNIKA	006, 009, 019, 023, 025, 026, 029, 036, 051, 052, 057
SONY	005, 017, 039, 087, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194	TELEAVIA	171
SOUND&VISION	127	TELECO	135
SOUNDESIGN	050, 051, 052, 057, 172, 177	TELEFUNKEN	025, 163
SOUNDWAVE	018	TELEMEISTER	098
SPECTRA	133	TELETECH	004
SPECTRICON	002	TELETON	017, 057, 063, 097, 099
SQUAREVIEW	047	TELEVIDEON	098
SR2000	106	TENSAI	064, 093, 098, 118, 158, 161
SSS	009, 052	TESLA	135
STANDARD	004, 063, 064, 098	TEXET	062, 064
STARLITE	052, 161	THOMAS	110, 124, 177
STERN	042, 076, 099	THOMSON	068, 155, 163, 170, 171
SUNKAI	117, 118	THORN	018, 028, 040, 087, 107, 108, 110, 112, 128, 129, 161, 163, 165, 168, 172, 177
SUNSTAR	161	TMK	025, 049, 050
SUPERTECH	097, 161	TOKAI	124
SUPRA	025	TOMASHI	075
SUSUMU	064	TOSHIBA	017, 026, 038, 040, 069, 106, 108, 172
SUPREMACY	172	TOSONIC	056
SUPREME	177	TOTEVISION	019
SULVANIA	010, 012, 014, 015, 023, 057, 058, 080	TOWADA	099, 127, 158
SYMPHONIC	047, 172, 177	TRIUMPH	049, 069
SYSLINE	018	TV TEXT	089
TADISTAR	161	UHER	098, 127, 158, 161, 173
TADNDY	124	ULTRA	081, 124
TANDY	028, 030, 042, 063, 064	ULTRAVOX	127, 158, 159, 160, 161
TASHIKO	110, 161, 172	Universal	011, 013

Appendix

UNIVERSUM	018, 071
UNIVOX	159
URANYA	158
VECTOR RESEARCH	015
VESTEL	018, 161
VICTOR	022
VIDEOTECHNIC	063
VIDEOTON	094
VIDIKRON	023
VIDTECH	009, 017, 050
VISA	004, 005, 017, 018, 042, 068
VISION	098, 161
VOXSON	042, 099, 159, 160
VTQ	126

WALTHAM	063, 094, 099
WARDS	006, 009, 010, 011, 013, 014, 015, 023, 025, 034, 040, 043, 050, 051, 058
WATSON	018, 098, 161
WATT RADIO	097, 127, 158
WEGA	017, 160, 172
WHITE WESTINGHOUSE	018, 062, 098, 106, 158, 161
WORLD-TECH	133
YAMAHA	009, 015
YOKO	018, 063, 071, 133, 161
YORK	108
ZANUSSI	076, 099
ZENITH	006, 007, 029, 177
ZONDA	002

3. DVD Code List

Brand	Code
DVD Players	
AIWA	146
ALPINE	098
APEX DIGITAL	087, 111, 115
BROKSONIC	130
CINEVISION	091
DENON	007, 080, 173
DURABRAND	091
DVD 2000	017
EMERSON	091, 143
FISHER	147
FUNAI	143
GE	026, 027
GOLDSTAR	091
GO VIDEO	137, 091, 220, 221, 222
HARMAN KARDON	084, 140
HITACHI	101
INTEGRA	142, 180
JBL	084
JVC	012
KENWOOD	151
KLH	135
KRELL	104

LEXICON	148
LG	057, 074, 091
MAGNAVOX	066, 096
MARANTZ	095, 105
MERIDIAN	153
MICROSOFT	027
MITSUBISHI	017
MYRYAD	102, 134
NAD	088
NAKAMICHI	103
ONKYO	035, 076, 180
ORION	130
PANASONIC	021, 138, 139, 144, 150
PHILIPS	066, 095, 105
PHILIPS-MAGNOVOX	035, 066
PIONEER	131
POLAROID	233
POLK AUDIO	035, 066
PROCEED	086
PROSCAN	026, 027
RCA	026, 027
SAMSUNG	056, 070, 119, 137, 159, 165, 170
SANSUI	154
SANYO	147

SEARS	147
Sensory Science	222
SHARP	094
SONY	033, 118, 126, 145, 191
SYLVANIA	143
SYMPHONIC	143
TATUNG	102
TECHNICS	138
TECHWOOD	088
THOMPSON	026, 027
TIVO	234, 235
TOSHIBA	035, 034, 130, 141, 164, 188
VENTURER	149
YAMAHA	066, 089, 138, 195, 197
ZENITH	057, 074, 091
DVD Recorders	
GO VIDEO	220, 221, 222
PANASONIC	139
SENSORY SCIENCE	222
SONY	191
TOSHIBA	188

TV/DVD Combo	
AIWA	146
FUNAI	143
SAMSUNG	165
SYLVANIA	143
SYMPHONIC	143
TOSHIBA	130
TV/DVD/VCR Combos	
MAGNAVOX	143
PANASONIC	144
SYLVANIA	143
TOSHIBA	164
DVD/VCR Combos	
GO VIDEO	137
PANASONIC	150
PHILIPS	105 (VCR Functions for VCR 067)
SAMSUNG	137, 159
SANSUI	154
SONY	145
TOSHIBA	141
ZENITH	091 (VCR Functions for VCR 101)

4. Audio & AUX Code List

Brand	Code
Audio Receiver	
ADCOM	082, 092, 225, 161, 023, 148, 149
AIWA	018, 104, 170, 202, 203, 213, 211, 188
AKAI	189
ANTHEM	127, 128
ARCAM	141, 255
ATLANTIC TECHNOLOGY	134
AUDIO FILE	071
B & K	096, 097
BOSE	070, 170, 147, 199, 224, 227
BOSTON ACOUSTICS	246
CARVER	006, 022, 028, 050, 061, 071, 077, 185, 201, 214, 226
CLARION	026
DELPHI	251
DENON	002, 109, 121, 133, 215, 230, 234
ELAN	057, 090

ESCIENT	229
FISHER	047, 182, 214
FLEXTRONICS	207
FOSGATE AUDIONICS	134, 231
GOLDSTAR	008
HARMAN KARDON	118, 119, 153, 154, 231, 233
HITACHI	020
INTEGRA	029
JVC	034, 091, 114, 163, 191
KENWOOD	005, 026, 037, 066, 145, 182, 192, 196, 252
KLH	123
KRELL	072, 150, 197, 222
LEXICON	120, 159, 160, 235, 236, 237
LINN	124, 206
LUXMAN	004, 009, 052, 115, 137, 139, 165
MAGNAVOX	086, 152, 164, 208
MARANTZ	006, 015, 028, 031, 040, 056, 063, 185, 186
MCINTOSH	053, 238

Appendix

MERIDIAN	012, 013, 100
MITSUBISHI	204, 242, 243
MONDIAL	042, 043, 081, 112, 157, 158
MYRYAD	030, 099
NAD	038, 113, 186, 210, 216
NAKAMICHI	054, 111, 172, 183, 244, 245
NIRO	135
NILES	241
ONKYO	017, 029, 046, 080, 108, 209
OPTIMUS	026, 041
OUTLAW	134
PANASONIC	032, 098, 177, 195, 219, 221
PARASOUND	003, 103, 105, 125, 126, 129, 130, 132
PHILIPS	063, 249, 250
PIONEER	014, 035, 039, 044, 069, 078, 116, 168
POLKAUDIO	251
PROCEED	021, 144
RCA	010, 048, 055, 067, 117, 156
REALISTIC	019, 073, 075
ROTEL	074, 083, 085
RUSSOUND	223, 239
SAMSUNG	016
SANSUI	040, 048, 063, 065, 110, 228
SANYO	047, 059

SCOTT	019
SHARP	026, 094, 131, 175
SHERWOOD	024, 102, 106, 246
SONY	018, 025, 101, 166, 179, 180, 184, 218, 220, 247, 248
SOUNDESIGN	036
SUNFIRE	142, 143, 146
TEAC	005, 019, 049, 111, 212, 217
TECHNICS	007, 122, 177, 178, 193, 200, 219, 254
THETA DIGITAL	136
TOSHIBA	033, 060, 087
YAMAHA	011, 026, 027, 051, 067, 089, 169, 173, 181, 205, 232, 253
MEDIA PC Controls	
DELL	190, 194
GATEWAY	190, 194
HP	190, 194
SONY	190, 194
TOSHIBA	190, 194
WINBOOK	190, 194
XM Radios	
DELPHI	251
KENWOOD	252
POLKAUDIO	251
SONY	220

MDB1.2